

## P-Trap Installation:

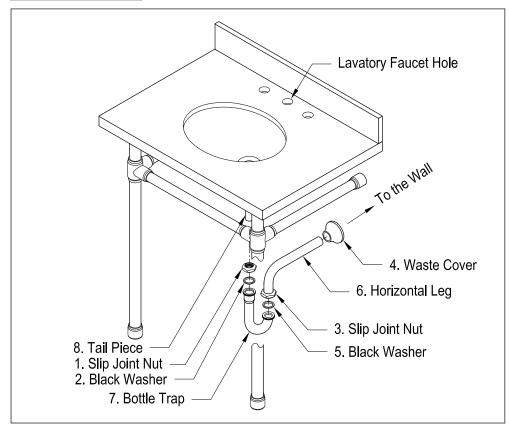

- 1. Remove horizontal leg and slip joint nut from bottle trap.
- 2. Apply Teflon tape to all exposed threads.
- 3. Insert slip joint nut (3) and waste cover (4) onto horizontal leg (6).
- 4. Insert horizontal leg into wall waste opening, do not tighten.
- Insert black washer (2) and slip joint nut (1)onto tail piece (8).
- 6. Attach bottle trap (7) to tail piece and hand tighten slip joint nut (1).
- 7. Align bottle trap with horizontal leg and tail piece, at this point it may be necessary to cut part of tail piece or part of horizontal leg to obtain proper alignment.
- 8. After all components have been properly aligned, insert horizontal leg making sure to insert black washer (5) before tightening slip joint nut (3).
- 9. Thread both slip joint nuts onto bottle trap and tighten along with slip joint securing horizontal leg to wall waste opening.
- 10. Check for leakage by opening faucet and letting water run for at least 45 seconds.

# FAUCETURE

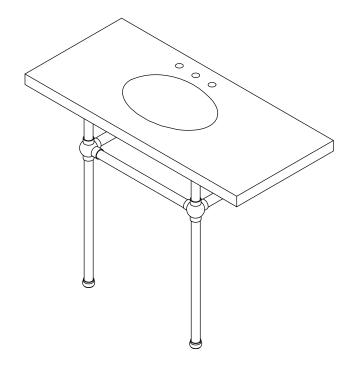

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street, Chino, CA 91710




## Granite/Marble Care & Maintenance


Your new granite/marble vessel top has been factory sealed and polished to a smooth glass finish. In order to maintain the surface and keep it looking fresh and natural, we recommend the following procedures:

- 1. All stone products require a resealing at least once a year. Since your top has already been sealed at the factory. You will need to schedule your top for resealing accordingly.
- 2. Before applying the sealer, the exposed areas should be completely clean and dry.
- 3. For routine maintenance and cleaning, we recommend Stone Care's "Clean Encounters." The cleaner should be used weekly and more frequently with heavier than usual use or for cleaning of chemicals, such as those commonly found in the bathroom. Be sure to follow the instructions on the container.
- 4. To keep your granite/marble vessel top hygienically clean, we recommend Stone Care's "Counterriffic" on a weekly basis. This spray disinfectant will kill all types of bacteria and is FDA and EPA approved for food handling surfaces.
- 5. Liquid spills, such as alcohol, medications, etch should be cleaned up promptly. Some liquids with high-acid content can etch granite/marble surfaces if left for any length of time. Popular products that should be promptly cleaned up are: shaving cream, toothpaste, perfume, cologne, nail polish remover, hair coloring and perm products, shampoo, drain opener, and toilet bowl cleaner.
- 6. Place protective pads on the bottoms of any heavy objects, such as pottery, appliances, or other objects that may scratch the granite/marble surface.
- 7. Avoid abrasive cleaners or rough cleaning pads. If necessary, a soft buffing pad can be used.
- 8. Use coasters under drinking glasses to prevent glass rings on the surface.
- 9. Do not stand on the granite/marble top to fix overhead lights or other items





# Installation Step:

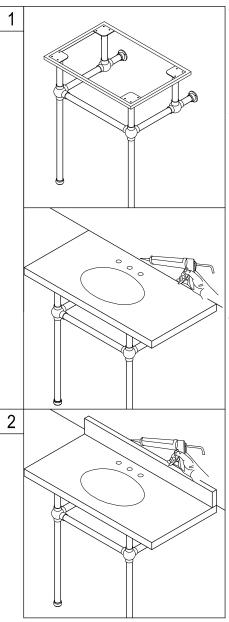

- . Apply a bead of silicone sealer on the top edges of the vanity cabinet. Place your granite/marble top on it with an overhang of 1/2" on the edges and permit the sealer to dry. See manufacturers instructions for drying time.
- 2. If you plan to use the enclosed and provided 4" back splash, apply two beads of caulking or construction adhesive on the rear of the backsplash (and the sides plash if required) and push firmly to the wall. Be sure the wall is clean, dry and smooth. You may to use a polishing compound if you wall is uneven or has holes or indentations.


Remove loose paint or any wallpaper or decorative material before installation of the back or side splash.

#### CAUTION!!!!:

Please make sure the faucet you have selected will not interfere with the backsplash. In some installations, the base of your faucet might be too large in diameter to allow for back splash installation.








### Installation:

- 1. Once unit has been assembled place at the desired location.
- 2. Gently place basin on top of pedestal legs and very carefully place in the location where the pedestal legs will be installed and after leveling draw a line across the bottom of the basin.
- Remove the basin, find the location of the wood studs and using the marked line as a guide to install support brackets at the location of the studs, make sure at least one of the screws is secured to the wood studs.
- 4. The depth of wall drill hole for installing anchor should be 52mm (2-1/16") Min.
- 5. Place basin on top of pedestal legs, apply a bead of silicon around the back perimeter of the basin.

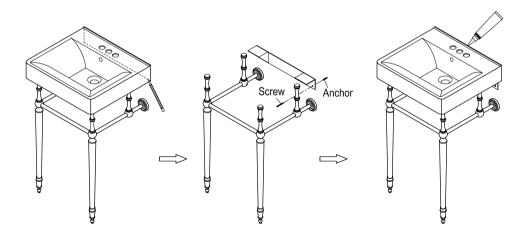

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street, Chino, CA 91710