




Aqua Eden

ELEMENTS OF DISTINCTIVE STYLE

Cast Iron Bath Tub Installation




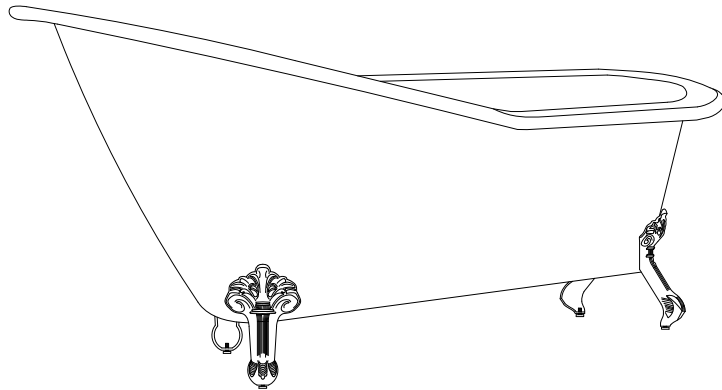


Parts:

Bolts	Washer & Locknut
	
4 Pcs	4 Pcs

www.kingstonbrass.com
 TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
 TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
 12775 Reservoir Street, Chino, CA 91710

TOOLS REQUIRED

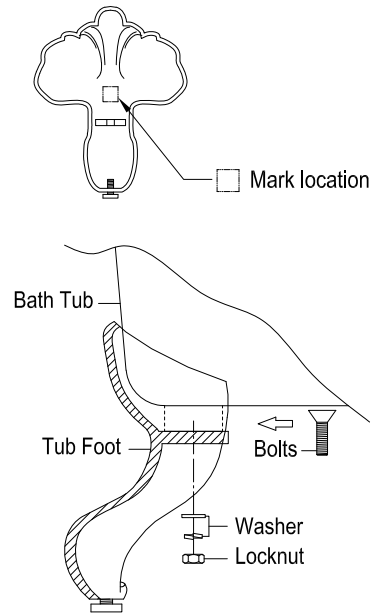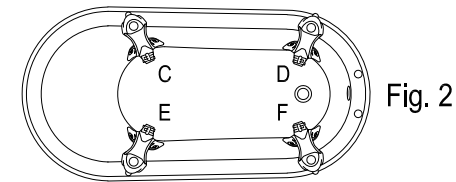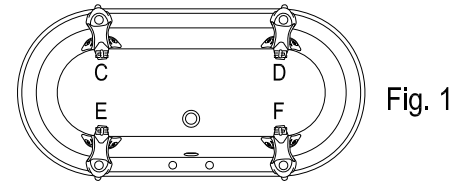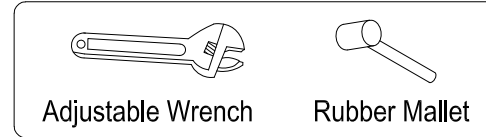

- If the tub drain is located in the center, please install the tub feet pointing in a more horizontal position (Fig 1).
- If the tub drain is located at either end of the bathtub, the tub feet need to be pointed in a more outward direction for the installation (Fig 2).

Installation Steps:

- Step 1. Turn tub over and set on non-abrasive mat, insert pyramid bolts unto the mounting slot at the bottom of the tub.
- Step 2. Align the feet with the bolt, insert leg, washers and nut and tighten loosely, the legs marked "DF" are to be installed in the tub mark "D" & "F", and the legs marked "CE" are to be installed in the tub mark "C" & "E". When all 4 feet have been installed, tighten the bolts and check the fit.
- Step 3. Adjust leg for proper fit, it might be necessary to tap with rubber mallet to insure a good position.
- Step 4. Retighten bolts.
- Step 5. When all four legs have been installed, turn tub over carefully as not to damage the finish.
- Step 6. If tub wobbles, adjust leg by raising or lowering leg adjustment bolt at the bottom of each leg.

Cleaning

Clean with a damp cloth only.
 Avoid using metal or abrasive polishes.